



# PLASTIC VACUUM FORMING, INC.

12103 RADIUM DR. • SAN ANTONIO, TX 78216 • 210/344-8531 • 1-800-458-0263




## TIE-DOWN KIT

Recommended Instructions

Method used is at owner's discretion

***Tied down stand is owner's responsibility***


### 1 Locate center of stand.

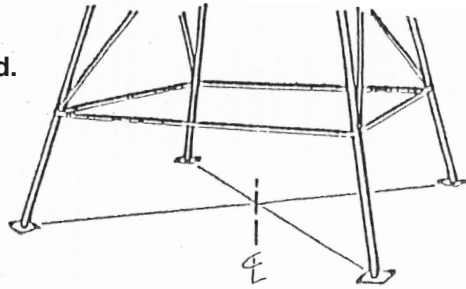

#### Secure Anchor



##### A) In Rocky Ground

Drill or dig an 8" or 10" diameter hole in ground. Set anchor in place. Fill and pack with rocks, dirt and water or fill with concrete/gravel mix.

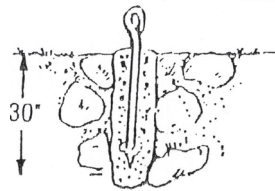

##### B) In Ground


Insert a tire tool or rod through anchor eyelet and screw anchor into place leaving approx. 2" above ground.

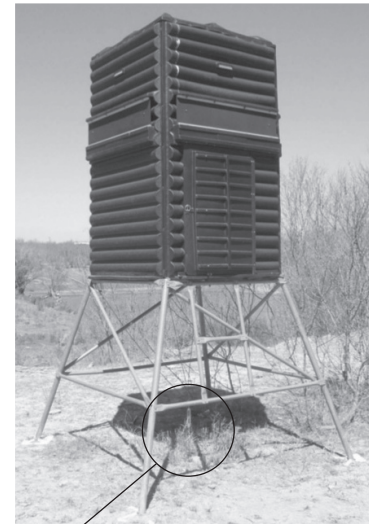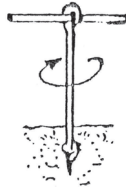


#### TYPICAL SECURING DETAIL FOR:

- A. Rocky Ground
- B. Ground

Quick link needs to be tightened with wrench.

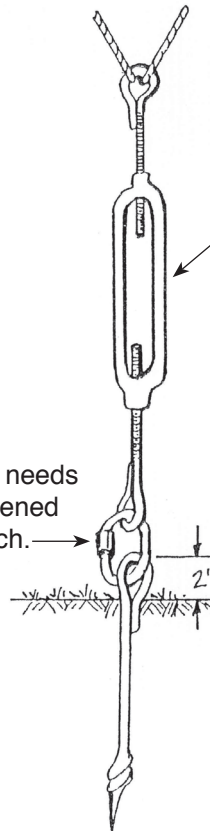

### 2 Hook All Four "S" Hooks Over Upper Legs

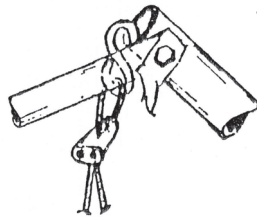

### 3 Connect Quick Link to turnbuckle and anchor or eyelet bolt in ground

NOTE: Cables are assembled to proper length at factory to enable easy assembly. If either cable is not long enough (with turn buckle turned to full length) or too long (with turn buckle tightened up), loosen cable clamp at top end and adjust cable to required length and retighten clamp.

**Check turnbuckle occasionally and tighten if necessary. DO NOT TWIST CABLE.**

### 4 Tighten down cable with turn buckle

NOTE: Plastic Vacuum Forming, Inc. assumes no liability for injury or damage to persons or property resulting from the use of its products or services. The products that we sell must be assembled, installed, anchored and used with care, caution and common sense.